

Quick Command For PTZ Camera V1-202403-853A version

Function	Operation mode	remark	
No.1(No.1-32# preset position)	call 41# preset position		
No.2(No.17-32# preset position)	call 42# preset position		
No.3(No.65-80# preset position)	call 43# preset position		
No.4(No.113-128# preset position)	call 44# preset position		
No.5(No.129-144# preset position)	call 45# preset position		
No.6(No.145-160# preset position)	call 46# preset position		
No.7(No.161-176# preset position)	call 47# preset position		
No.8(No.177-192# preset position)	call 48# preset position		
cruise preset position stay time 4s	set 51# preset position		
cruise preset position stay time 6s	set 52# preset position		
cruise preset position stay time 8s	set 53# preset position	default	
cruise preset position stay time 10s	set 54# preset position		
cruise preset position stay time 12s	set 55# preset position		
Auto tracking mode: guard position	set 56# or 92# preset position		need camera with auto tracking function,then open the humanoid funtion
Auto tracking mode: tracking time setting	set 93# + set N (N=20-255)	default 60S	
Auto tracking mode: time to come back	set 94# + set N (N=1-255)		
Auto tracking mode: Open guard preset tracking	call 56# or 92# preset position		
Auto tracking mode: Open cruise preset tracking	call 57# or 93# preset position		
Auto tracking mode: Close tracking function	call 58# or 94# preset position	default closed	
start 360° horizontal continuous scanning	call 96-100# preset position		
start left and right limit position scanning	call 38# preset position		
delete left and right limit position scanning	set 38# preset position		
left limit position setting	set 35# preset position		
right limit position setting	set 36# preset position		
start sound and light alarm function	call 37# preset position to open set 37# preset position to close		need camera with sound function
limit position scanning speed setting	set 60-64# preset position,speed will be 3°/s、6°/s、9°/s、15°/s、40°/s		
leisure action switch	call 105# preset position to open set 105# preset position to close	default closed	
leisure action	call No.101: guard position (No.1# preset position) call No.102: 360°scanning call No.103: limit scanning call No.104: the first cruise	default 90s	
return to factory setting	call No.115		
delete all preset position	call No.33	cruise 1-8	
IR-Auto mode	call No.81 preset position		
IR-Open forced	call No.82 preset position		
IR-Close forced	call No.83 preset position		
IR led-Open sensitivity: low	set No.81 preset position		
IR led-Open sensitivity: middle	set No.82 preset position		
IR led-Open sensitivity: high	set No.83 preset position		
IR led far/near switching	call No.84		
All Far IR Leds Open	call No.85		
All IR Leds Open	call No.86		
speed for limit scanning and 360°scanning	set 111+ set N (N=1-64)		
max speed to control ptz	set 113+ set N (N=1-64)		
cruise stop time setting	set 114+ set N (N=1-254)		
cruise speed setting	set 115+ set N (N=1-64)		
leisure action time setting	set 117+ set N (N=1-254)	default 90s	
ptz camera type: IR mode (black and white video when night)	set 110, then call 87		need camera with IR leds/dual light leds
ptz camera type: white led mode (Colorful video when night)	set 110, then call 88		need camera with white leds/dual light leds